



1. Mount the bearing.  
Pressa lagret.
2. Place the big ring and mount the lock ring.  
Lägg i den stora ringen och montera låsring.
3. Place the small ring on the stub shaft and press it into the bearing.  
Skjut på den lilla ringen på klämaxel/flänsaxel och pressa axeln i lagret.



For further information please visit us at [www.aquadrive.com](http://www.aquadrive.com)

**Book our full service - we offer installation, maintenance and service for your Aquadrive® system.**  
Contact our service team in Bönen: +49 (0) 2383 921 15 0